



**DAS DACH,
STARK WIE EIN STIER**

FUGE. 138 | 200 | 300 | 400

MONTAGEHINWEIS


- ! Ausschließlich für Sidings mit Schattenfuge und Endabkantung in waagrechter und senkrechter Verlegung geeignet.
- ! Max. Siding-Länge: 2.500 mm.
- ! Die Breite der Fuge entspricht mit 15 mm der Siding-Schattenfuge.
- ! Die Fuge kann unabhängig von der Unterkonstruktion montiert werden.
- ! Die Montage von Fuge über Fuge bei zwei übereinanderliegenden Reihen ist nicht möglich.
- ! Verlegerichtlinien für PREFA Sidings beachten.






FUGE. 138 | 200 | 300 | 400


MONTAGEHINWEIS

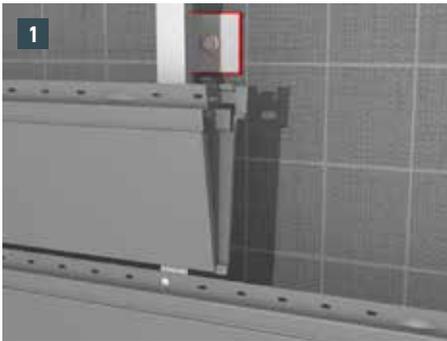


PREFA Fuge entsprechend Bild 1 in die Endabkantung des PREFA Sidings stecken.

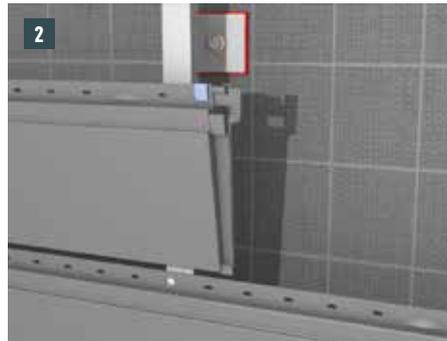


PREFA Fuge mittels vorgebogener Lasche rückseitig am PREFA Siding fixieren.

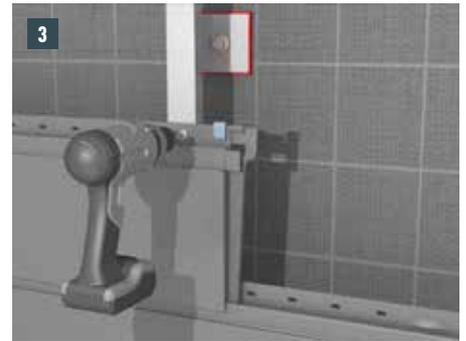

PREFA Siding mit vormontierter Fuge entsprechend Siding-Verlegerichtlinien montieren und an der Unterkonstruktion befestigen.

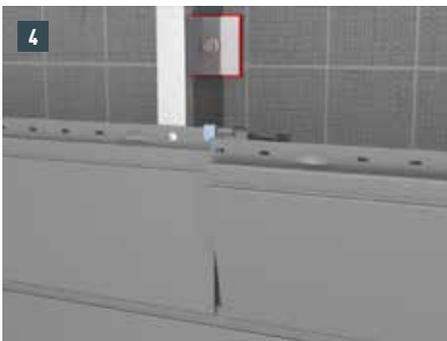


Nächstes PREFA Siding platzieren und die seitliche Endabkantung in die PREFA Fuge stecken.

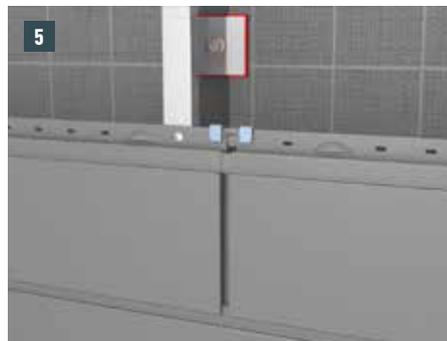

Lasche rückseitig an PREFA Siding fixieren.



Nächstes PREFA Siding entsprechend Verlegerichtlinien mit Versatz montieren. (Mindestversatz: eine Baubreite)

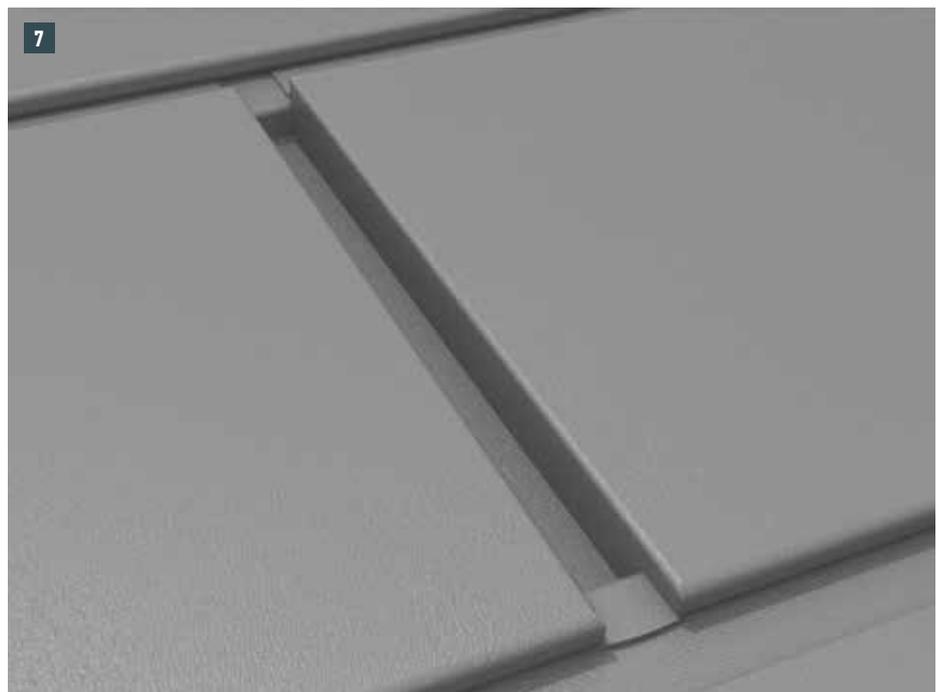

Bitte beachten Sie bei der Verarbeitung die PREFA Verlegerichtlinien sowie die gängigen Fachnormen und Sicherheitsvorschriften.



THE ROOF
AS STRONG AS A BULL

JOINT. 138 | 200 | 300 | 400

INSTALLATION INSTRUCTIONS


- ! Only suitable for sidings with shadow gap and edge downstand installed in a horizontal or vertical position.
- ! Max. siding length: 2,500 mm.
- ! At 15 mm, the width of the joint corresponds to the siding shadow gap.
- ! The joint can be installed regardless of the substructure.
- ! It is not possible to mount one joint above another on two rows of sidings installed one above the other.
- ! Observe the installation instructions for PREFA sidings.






JOINT.138|200|300|400


INSTALLATION INSTRUCTIONS

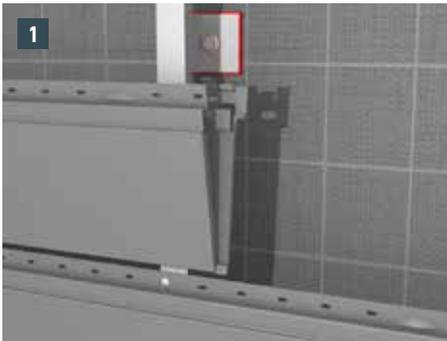


1
Insert the PREFA joint into the edge downstand of the PREFA siding as shown in figure 1.

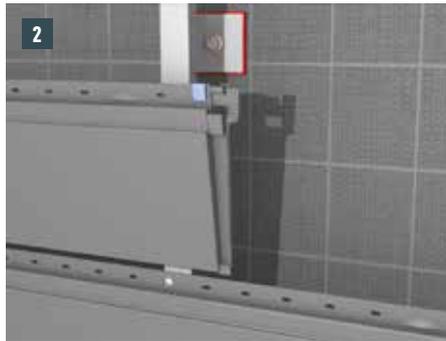


2
Attach the PREFA joint to the back of the PREFA siding using the pre-bent tab.

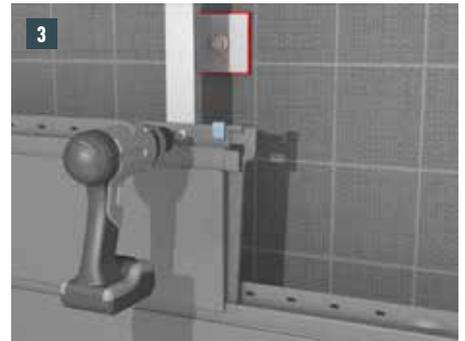


3
Install the PREFA siding with the pre-assembled joint according to the siding installation instructions, and fasten to the substructure.

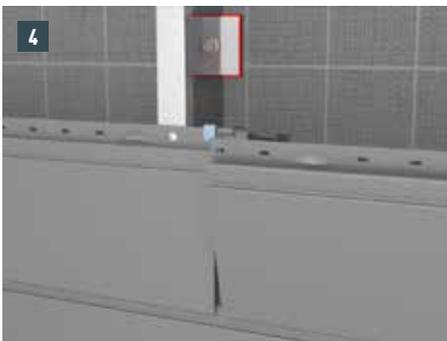

4
Position the next PREFA siding and insert the side edge downstand into the PREFA joint.

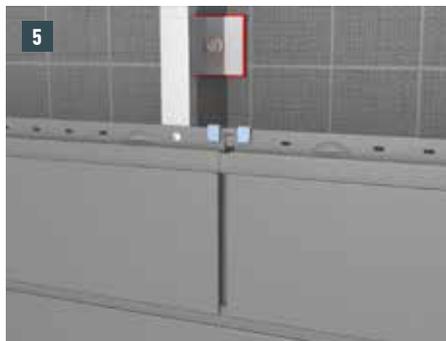


5
Fix the tab onto the back of the PREFA siding.

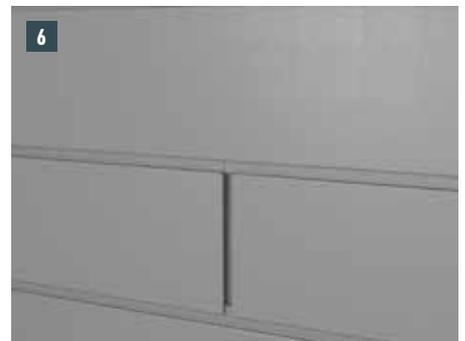

6
Offset the next PREFA siding according to the siding installation instructions.

(minimum offset: one visible width)

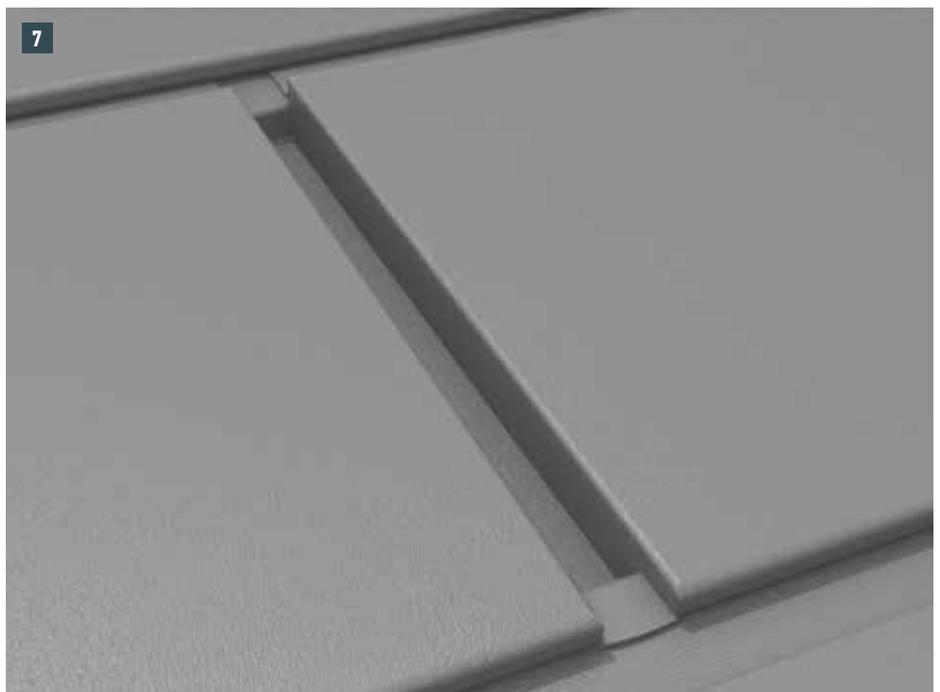

7
During installation, observe PREFA's installation instructions and the current professional standards and safety regulations.